



## Learning the controls – EC2421 Remote Handset

The remote handset has built in pre-set positions, the ability to adjust to any position and operate other devices well. You can attach the mounting clip to a nearby wall to keep the remote handset safe and dry. To clean the remote handset, wipe over with a soft dry cloth as required.



- Channel selector LED indicator
- Next/Previous channel selector \*\*\*
- 0% Fully Closed Or 100% ON for lights
- 33% Open Or 75% ON for lights
- 66% Open Or 50% ON for lights
- 100% Open Or 25% ON for lights
- Open Hold to run Or Dim Up for lights
- Stop any function Or Dim Down for lights
- Close Hold to run Or Turn lights OFF

\*\*\*The channel selector buttons are only required when the remote is operating other items, such as lights, roll down blinds, fans & heaters.


If your unit is attached to sensors or home automation be aware this can affect the above-mentioned operations.

V2.1 Feb 2022

## Replacing the handset battery

The remote handset has a battery in the rear of the unit. It will require replacing periodically. To replace the battery –

- Remove Phillips head screw on the back of the handset.
- Slide the two cases open & apart.
- Take out old battery.
- Replacement battery is CR2430 – ensure polarity is correct.
- Refit case and screw together.

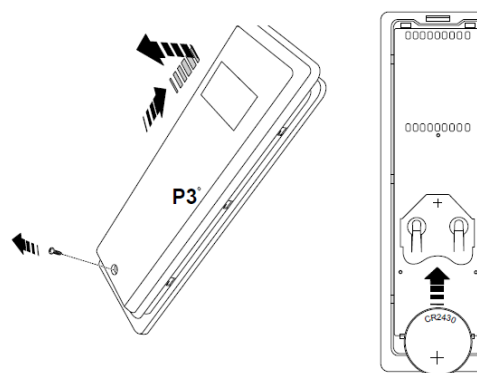

## Additional handsets

It is easy to add additional handsets for your system. Handsets come in white as standard with black being optional. Our [Bluetooth](#) or [WIFI app](#) can also operate your system from your smartphone or tablet. [T-Mate & Daisy](#) gives the benefit of daily timer operation and full scenes with one button push. Please contact your local dealer or installer for more information.

